

ThingMagic IZAR – Quick Start Guide

Accessories included in optional Development Kit:

- RP-TNC to RP-TNC RF Cable
- RFID Antenna (Supports all regions, 7.5 dBiC)
- LAN Cable (cross-over)
- Sample Tag Pack

NOTE: IZAR reader and power adaptor are not included in the development kit



Steps to Install IZAR and Read via a Web Browser

STEP 1

- Attach the RF cable to the "1" reader port and to the antenna.



STEP 2

- Attach the LAN cable to your network or directly to your PC.
- Connect the 24V DC power adaptor to the IZAR Reader. Install the correct prongs for your AC service onto the adaptor and plug it in.
- Do not power the reader with a USB cable.




STEP 3

- When the multicolor LED to the right of the USB HOST connector turns green, the reader has obtained a network address from the network's DHCP server, or negotiated one with your PC.
- *This can take several minutes.*



STEP 4

- By accessing your browser's "Settings", disable any proxy settings.
- Go to "LAN Settings" and disable both automatic configuration and proxy server. We recommend using Google Chrome.
- *Each browser is different so consult their online help if needed.*

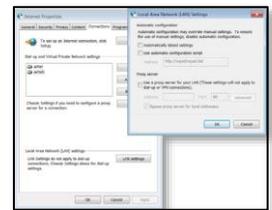

STEP 5

- Copy the web URL from the IZAR label into your web browser, only including what is on the line that starts with "http".
- Add ".local" to the URL if the IZAR Reader is directly connected to a PC.



JADAK
A Novanta Company

ThingMagic IZAR – Quick Start Guide

Steps to Install IZAR and Read via a Web Browser (Continued...)

STEP 6

- After a few moments, you will be connected to the IZAR status screen.
- When prompted, enter username as “web” and password as “radio”.

STEP 7




- Navigate to the Settings → "READER" "screen.
- Select “Antenna 1” (*Do not select any other antennas*).
- Press “Save Reader Settings” at the bottom of the page.

STEP 8

- Click on the “READ” icon at the top of the screen.
- In the READ screen, click on the “Start” button in the upper right. Tag reading result will appear on the main screen.

STEP 9

- To suspend reading, click the “Stop” button.

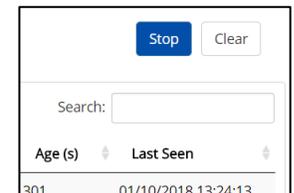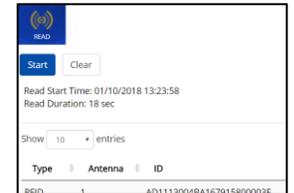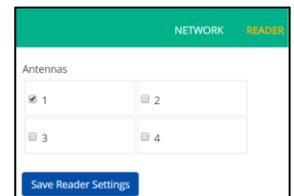

For More Information:

For additional functionality, troubleshooting and detailed instructions, download the IZAR User Guide from <http://www.thingmagic.com/manuals-firmware>

(As updated firmware becomes available, it will also be located on this site.)

To access more advanced functionality, download our PC-based utility, “Universal Reader Assistant” downloadable from: [http://www.thingmagic.com/manuals-firmware#Universal Reader Assistant](http://www.thingmagic.com/manuals-firmware#Universal_Reader_Assistant).

To learn more about creating host-based or reader-based programs to control the IZAR Reader, see the Mercury API programmers Guide and SDK, downloadable from: [http://www.thingmagic.com/manuals-firmware#Mercury API](http://www.thingmagic.com/manuals-firmware#Mercury_API)

RFID4u
Store

Authorized Reseller:
RFID4UStore
www.rfid4ustore.com
1-408-739-3500
sales@rfid4ustore.com

© Novanta 2017 Rev. 03282018



JADAK
A Novanta Company

USA Office

phone:+1 315.701.0678
email: info@jadaktech.com
web: jadaktech.com

European Office

phone:+31 (0)76.522.5588

Asia Pacific Office

phone: +86 512.6283.7080

 **Novanta**